



Step4

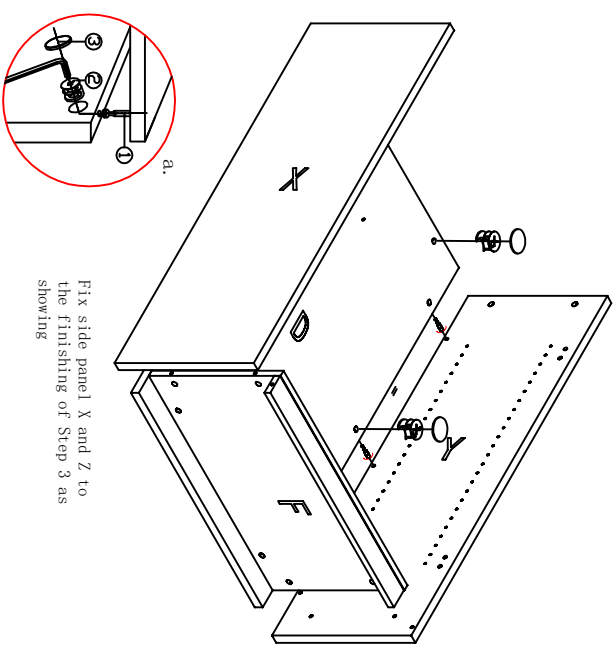


Fix side panel X and Z to the finishing of Step 3 as showing

Step5

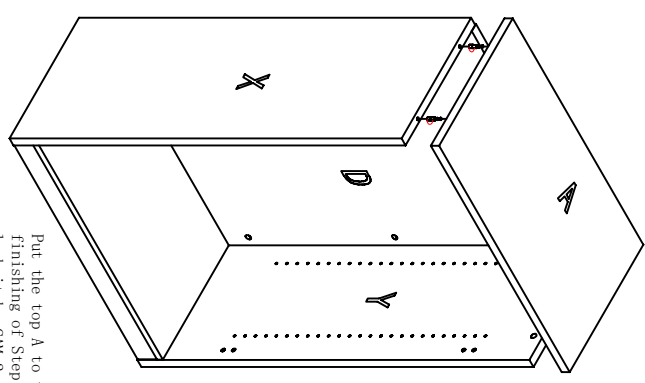


Put the top A to the finishing of Step 4., then lock it by CAM 2

Step6

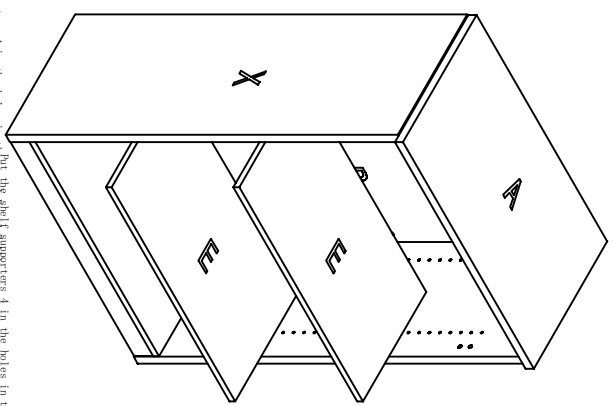

Put the shelf supporters 4 in the holes in the panel X and Z. The shelf supporters need to be same high level. Put the shelves on the shelf supporters. All the shelf are adjustable

Step7

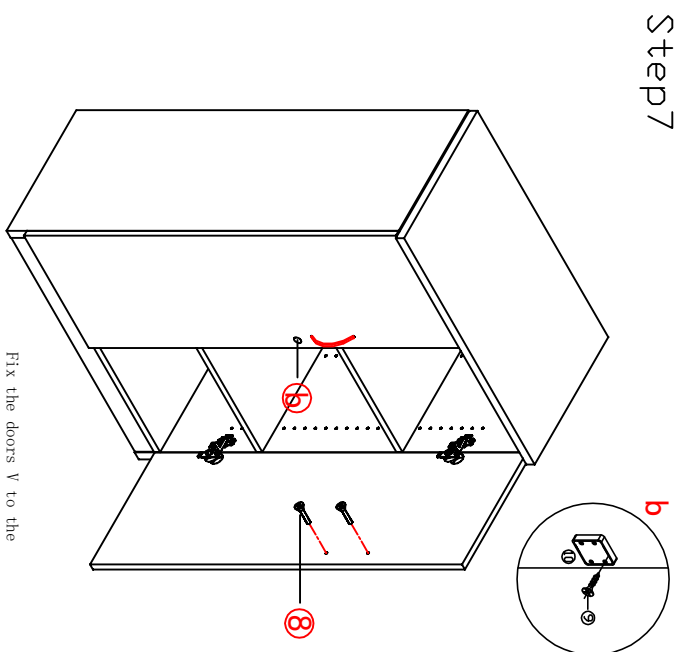

Fix the doors V to the side panel X and Z as details showing.

Step8

